

ABC TOOLS Inlays with tools - Driver system

In resistant oil-proof foam,

In 2 colours; missing tools are noticed immediately

Suitable for drawers of trolley:

SPEEDY, RUNNER, FASTBOY, PILOT, DRIVER, and TRUCK (see from page 877)

These inlays have standard modular dimensions:

- 390x170 mm, on 1/3 of the drawer;
- 390x390 mm, on 2/3 of the drawer;
- 390x560 mm, on 3/3 of the drawer

1/3




395 x 175 mm

2/3



395 x 375 mm


3/3

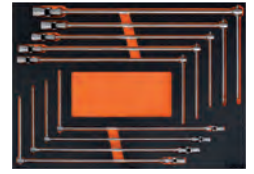

395 x 565 mm

Set of 8 screwdrivers in 1/3 inlay

Consisting of:

4 screwdrivers  3x80 - 4x100 - 5,5x125 - 6,5x15

4 screwdrivers  PH 0 - 1 - 2 - 4

Code N 6870 1000	N 6870/1	Each €		1	
------------------	----------	--------	--	---	---



Set of 8 screwdrivers in 1/3 inlay

Consisting of:

3 screwdrivers  T6 - T7 - T8

5 screwdrivers  T10H - T15H - T20H - T25H - T30H


Code N 6870 2000	N 6870/2	Each €		1	
------------------	----------	--------	--	---	---






Set consisting of 44 tools in 1/3 inlay

Consisting of:

2 screwdrivers  PZ 1 - PZ 2

1 bit holder handle  1/4"

30 bits      , reversible ratchet and attachment  1/4" in box

9 ballpoint L-wrenches with holder


Code N 6870 3000	N 6870/3	Each €		1	
------------------	----------	--------	--	---	---



Set of open end wrenches in 1/3 inlay

Consisting of:

9 wrenches 6x7 - 8x9 - 10x11 - 12x13 - 14x15 - 16x17 - 18x19 - 20x22 - 21x23 mm

Code N 6870 4000	N 6870/4	Each €		1	
------------------	----------	--------	--	---	---



Set of combination wrenches in 1/3 inlay

Consisting of:

16 combination wrenches 6-7-8-9-10-11-12-13-14-15-16-17-18-19-22-24 mm

Code N 6870 5000	N 6870/5	Each €		1	
------------------	----------	--------	--	---	---



Consisting of:

6 wrenches 25 - 26 - 27 - 28 - 30 - 32 mm

Code N 6870 6000	N 6870/6	Each €		1	
------------------	----------	--------	--	---	---

